


UNIROOT 700 Leister Quality System (LQS) Deactivate Monitored Welding




1. Go to the new LQS menu.

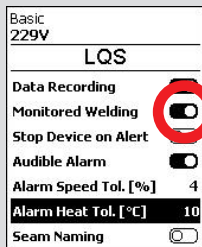

2. Monitored welding is active by default.

Example:

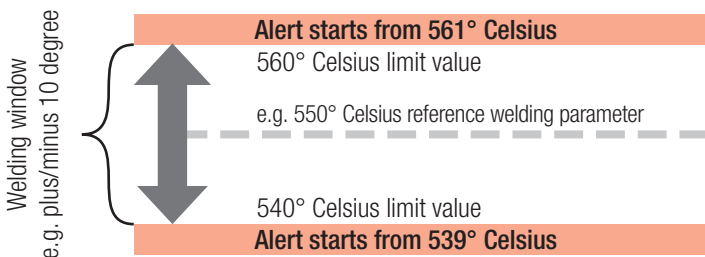

3. Deactivate this setting to work without monitored welding. Alerts will no longer occur.